



INSTALLATION INSTRUCTIONS

Accessory
CARGO NET
P/N 08L96-T0A-100


Application
201) CR-V

Publications No.
J9FG-CB%
Issue Date
G9DH &S%

Put this information in the glove box with the vehicle owner's manual.

PARTS LIST

Cargo net

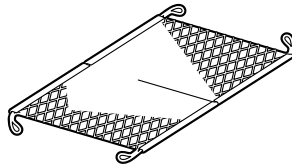

4 Snaps





Illustration of the Cargo Net in the Vehicle

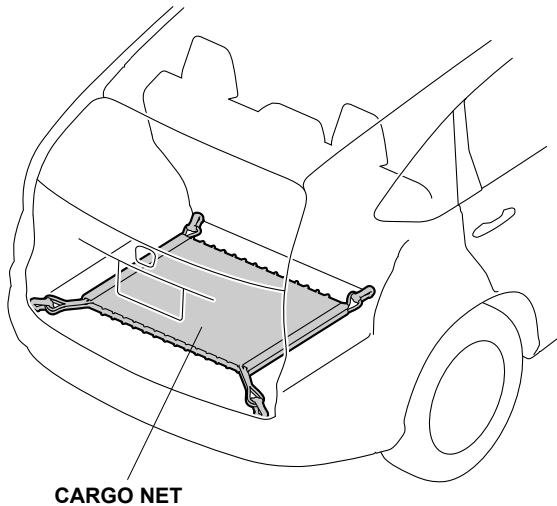


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

Installing the Cargo Net

1. Fold the cargo net in half, and attach four snaps to the cargo net as shown.

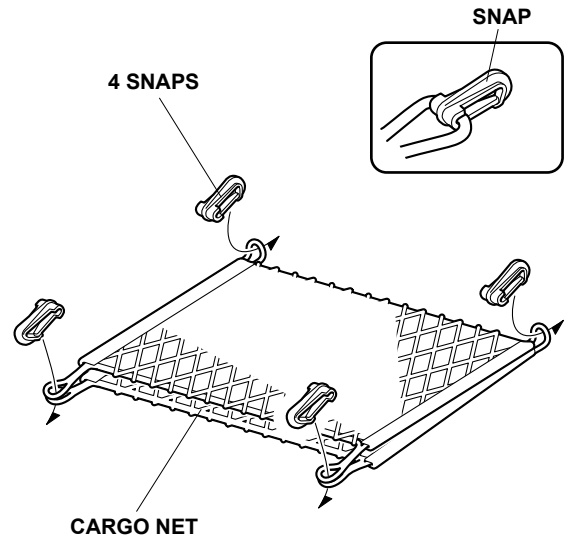

2. Open the tailgate, and secure four snaps to the hooks in the cargo area.

