⬡ HONDA

INSTALLATION
INSTRUCTIONS

Accessory	Application	Publications No.
CARGO LINER **P/N 08P42-SZA-100**	**2009 PILOT**	**AII 39301**
		Issue Date **MAY 2008**

PARTS LIST

Cargo liner

Power tailgate patch
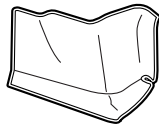
Non power tailgate patch

Bag

4   Long loop fastener pads

16   Short loop fastener pads

8   Alcohol swabs

TOOLS AND SUPPLIES REQUIRED

Small flat-tip screwdriver

Rubber roller

INSTALLATION

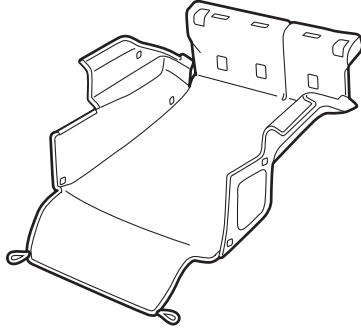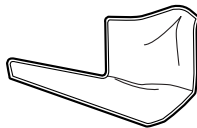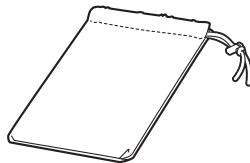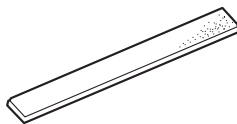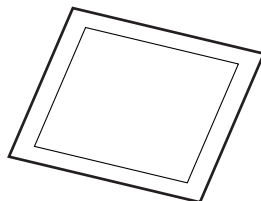> **Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

• This cargo liner cannot be installed with the interior bicycle attachment or seat cover or advance cargo net.

• This cargo liner should be installed only if the ambient air temperature is 15°C (60°F) or above. Warm up the surface of the vehicle body where the accessory will be attached to 15°C ~ 40°C when the temperature is low, especially in winter. Bonding performance of the double-sided adhesive tape could be reduced at low temperature.
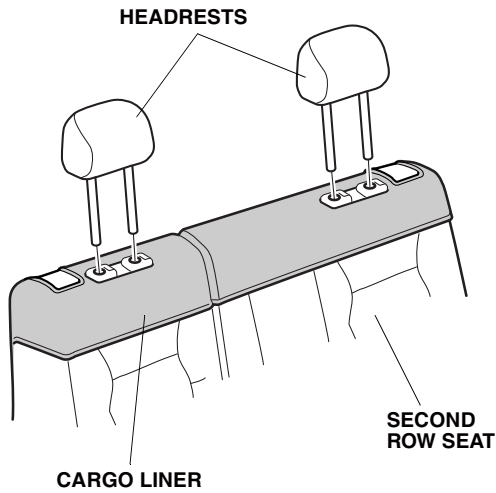
Installing the Cargo Liner

1.   Using a small flat-tip screwdriver, push and release the seat belt lower hook from each third row seat. Insert the seat belt lower hook to the fix hole.
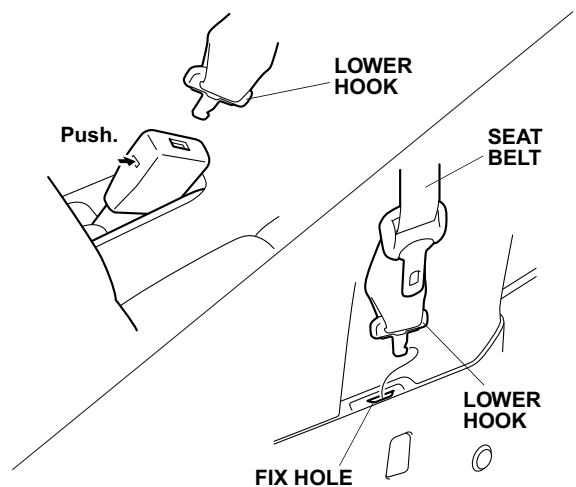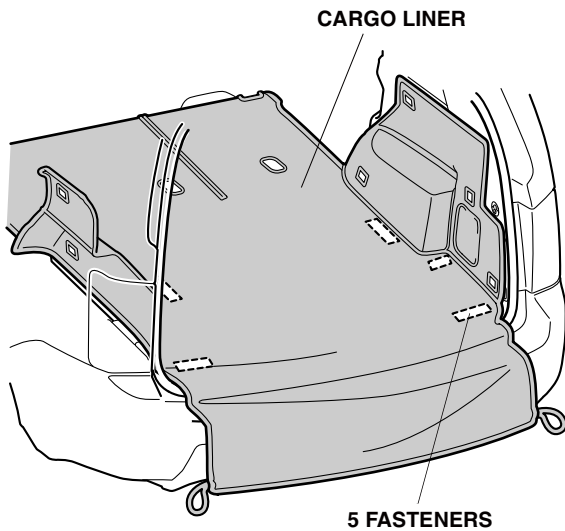

2.   Fold down the third row seats.

3. Remove the headrests from the second row seats by pushing the release buttons and lifting the headrests.

HEADRESTS

CARGO LINER

SECOND ROW SEAT

4. Install the cargo liner over the second row seat, then reinstall the headrests.

5. Fold down the second row seats.

CARGO LINER

5 FASTENERS

6. Attach five fasteners on the cargo liner to the cargo floor as shown.

7. Press the five hood fasteners firmly against the cargo floor with the rubber roller.

CARGO LINER

RUBBER ROLLER
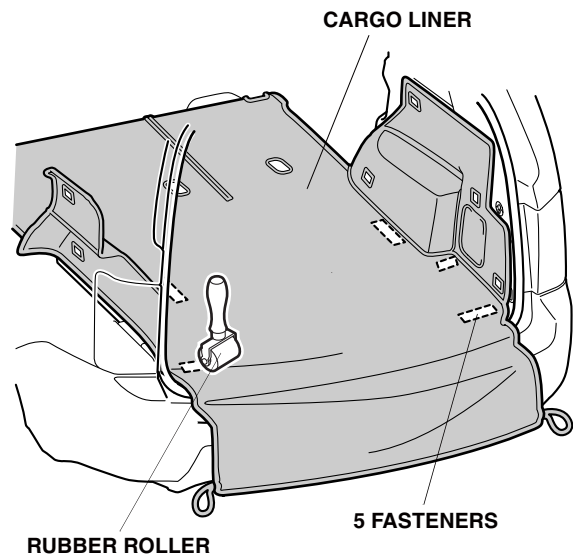
5 FASTENERS

8. Align the cargo liner to the right rear side panel, fold the cargo liner over and using the two alcohol swabs, throughly clean the area where the loop fasteners will attach.

FRONT

RIGHT REAR SIDE PANEL

LOOP FASTENER

CARGO LINER

Clean the area with an alcohol swab.
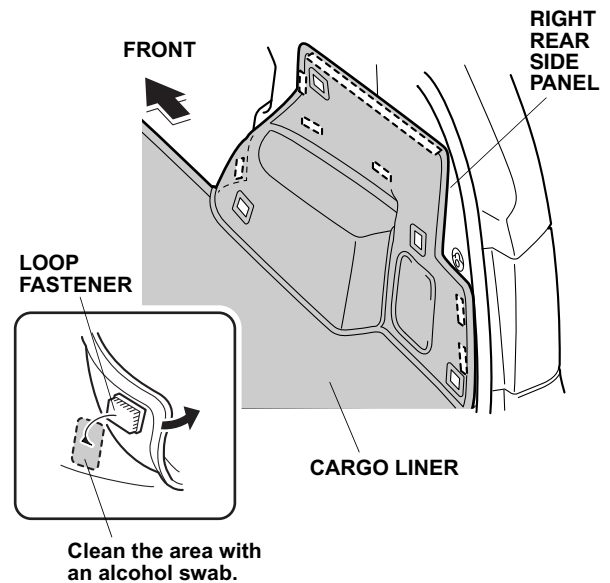
9. Align the holes on the cargo liner to the two tie-down hooks, anchor and power outlet on the right rear side panel.

TIE-DOWN HOOK
FRONT
CARGO LINER
4 SHORT LOOP FASTENERS
RIGHT REAR SIDE PANEL
POWER OUTLET
ADHESIVE BACKING
HOOK FASTENER
FASTENER PAD
TIE-DOWN HOOK
ANCHOR
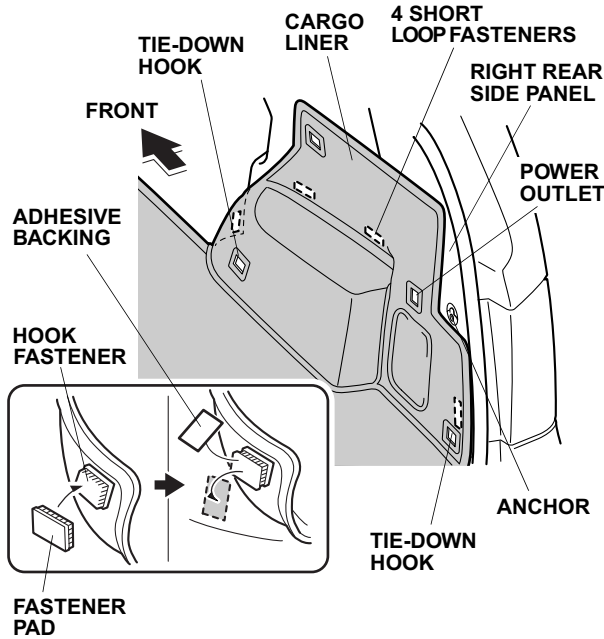
10. Locate the four short hook fasteners on the cargo liner and attach four short loop fasteners pads to the cargo liner as shown.

11. Remove the adhesive backing from four short loop fasteners, fold the cargo liner over, and attach the four short loop fasteners to the right rear side panel. Press the four short loop fasteners firmly against the side panel with the rubber roller.

12. Align the holes on the cargo liner to the recess cover on the right rear side panel.

LONG HOOK FASTENER
RECESS COVER
FRONT
RIGHT REAR SIDE PANEL
FASTENER HOOK
CARGO LINER
3 SHORT HOOK FASTENER
LOOP FASTENER
ADHESIVE BACKING

13. Locate the one long hook fastener and three short hook fasteners on the cargo liner and attach one long loop fasteners and three short loop fasteners to the cargo liner as shown.

14. Remove the adhesive backing from one long loop fastener and three short loop fasteners, fold the cargo liner over, and attach the one long loop fastener pad and three short loop faste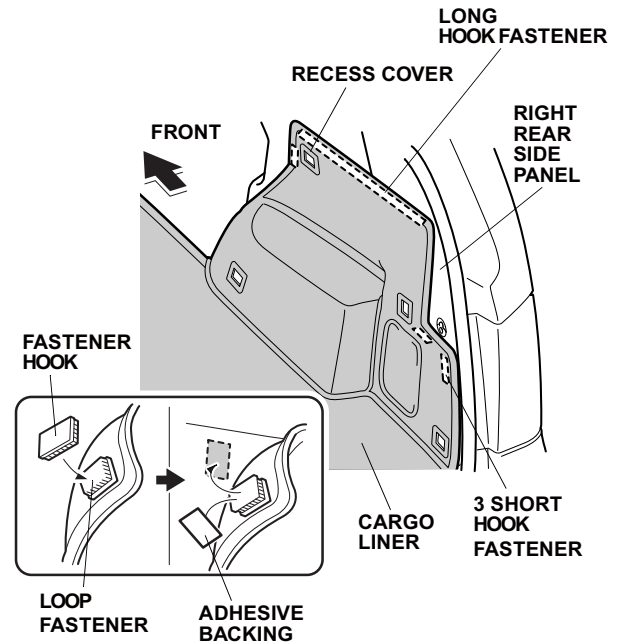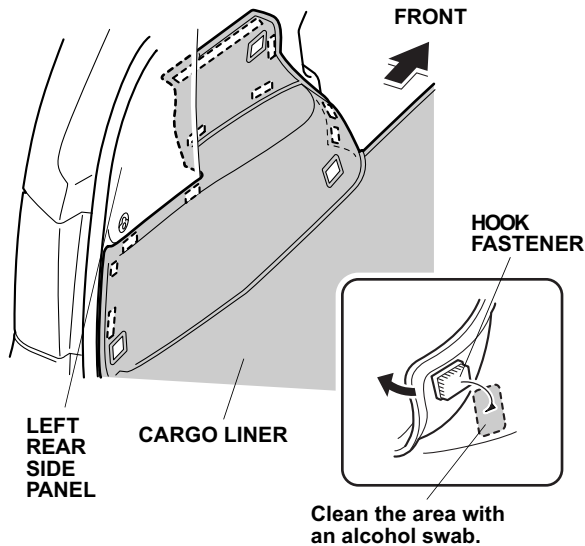ners to the right rear side panel. Press the one long fastener and two short loop fasteners firmly against the side panel with the rubber roller.

15. Align the cargo liner to the left rear side panel, fold the cargo liner over and using the three alcohol swabs, throughly clean the area where the hook fasteners will attach.

FRONT

HOOK
FASTENER

LEFT
REAR
SIDE
PANEL

CARGO LINER

**Clean the area with
an alcohol swab.**

16. Align the holes on the cargo liner to the two tie-down hooks on the left rear side panel.

**8 SHORT
LOOP FASTENERS**

CARGO LINER

**TIE-DOWN
HOOK**

FRONT

**ADHESIVE
BACKING**

**LEFT
REAR
SIDE
PANEL**

**TIE-DOWN
HOOK**

**LOOP
FASTENER**

**HOOK
FASTENER**

17. Locate the eight short hook fasteners on the cargo liner and attach eight short loop fasteners to the cargo liner as shown.

18. Remove the adhesive backing from eight short fasteners, fold the cargo liner over, and attach the eight short loop fasteners to the left rear side panel. Press the eight short loop fasteners firmly against the side panel with the rubber roller.

19. Align the holes on the cargo liner to the recess cover on the left rear side panel.
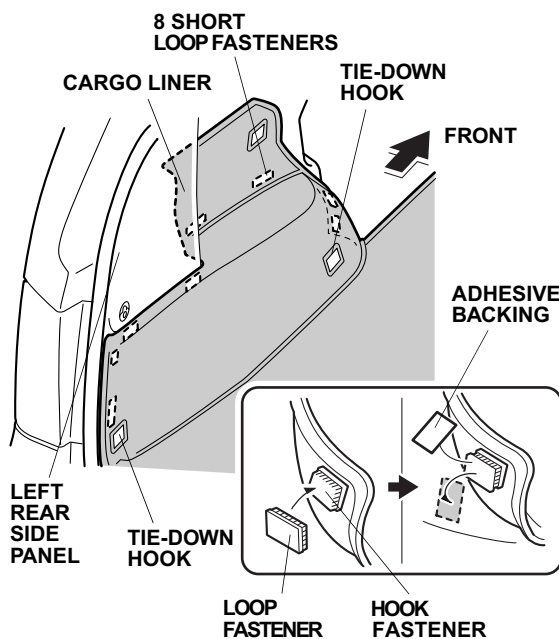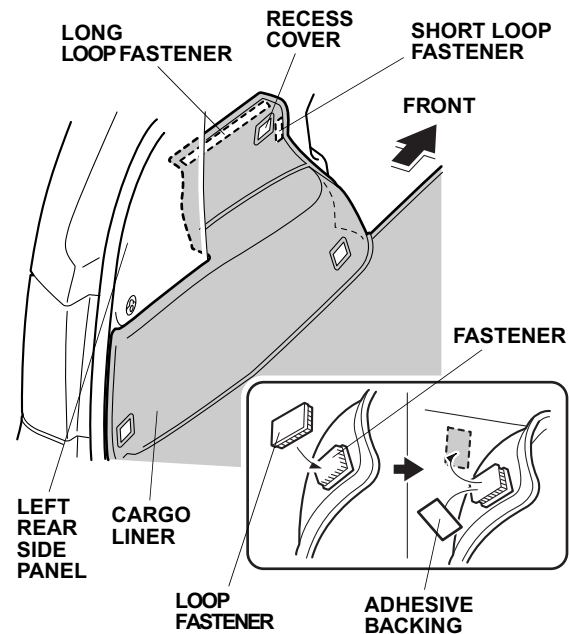
**LONG
LOOP FASTENER**

**RECESS
COVER**

**SHORT LOOP
FASTENER**

FRONT

FASTENER

**LEFT
REAR
SIDE
PANEL**

**CARGO
LINER**

**LOOP
FASTENER**

**ADHESIVE
BACKING**

20. Locate the one long hook fastener and one short hook fastener on the cargo liner and attach one long loop fastener and one short loop fastener to the cargo liner as shown.

21. Remove the adhesive backing from one long loop fastener and one short loop fastener, fold the cargo liner over, and attach the one long loop fastener and one short loop fastener to the left rear side panel. Press the one long loop fastener and one short loop fastener firmly against the side panel with the rubber roller.

AII 39301 (0805)

Power tailgate: Do step 22 through 25
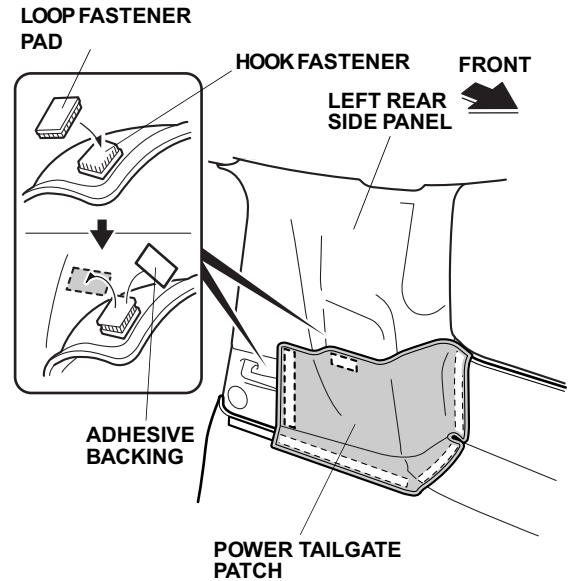Non power tailgate: Do step 26 through 29

Power tailgate

22. Secure the power tailgate patch to the cargo liner with two hook fasteners.

HOOK FASTENER

LEFT REAR SIDE PANEL

FRONT

Clean the area with an alcohol swab.

CARGO LINER

POWER TAILGATE PATCH
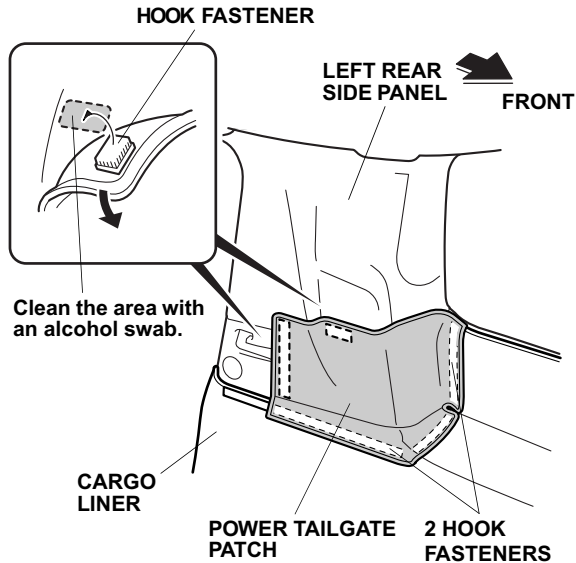
2 HOOK FASTENERS

23. Align the power tailgate patch to the left rear side panel, fold the power tailgate patch over and using the alcohol swab, throughly clean the area where the fasteners will attach.
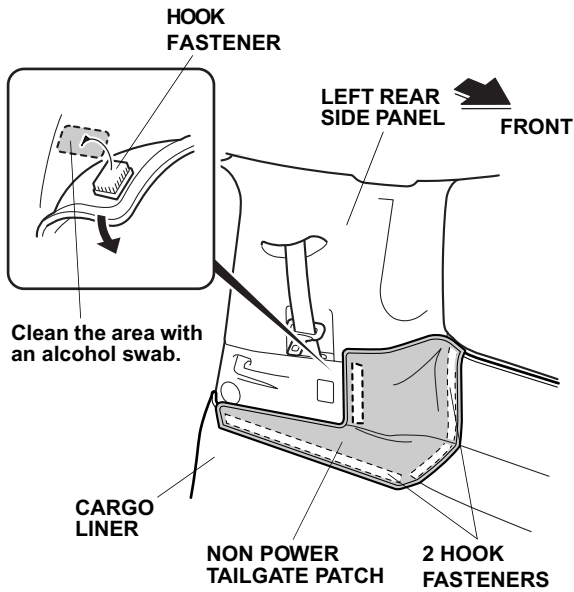
24. Locate the two hook fasteners on the power tailgate patch and attach two loop fasteners to the power tailgate patch as shown.

LOOP FASTENER PAD

HOOK FASTENER

FRONT

LEFT REAR SIDE PANEL

ADHESIVE BACKING

POWER TAILGATE PATCH

25. Remove the adhesive backing from two loop fasteners, fold the power tailgate patch over, and attach the two loop fasteners to the left rear side panel. Press the two loop fasteners firmly against the side panel with the rubber roller. Go to step 30.

AII 39301 (0805)

Non power tailgate

26. Secure the non power tailgate patch to the cargo liner with two hook fasteners.

HOOK FASTENER

LEFT REAR SIDE PANEL

FRONT

Clean the area with an alcohol swab.

CARGO LINER

NON POWER TAILGATE PATCH

2 HOOK FASTENERS

27. Align the non power tailgate patch to the left rear side panel, fold the non power tailgate patch over and using the alcohol swab, throughly clean the area where the hook fasteners will attach.

28. Locate the one hook fastener on the non power tailgate patch and attach one loop fastener to the non power tailgate patch as shown.

LOOP FASTENER

FASTENER

FRONT

LEFT REAR SIDE PANEL

ADHESIVE BACKING

NON POWER TAILGATE PATCH
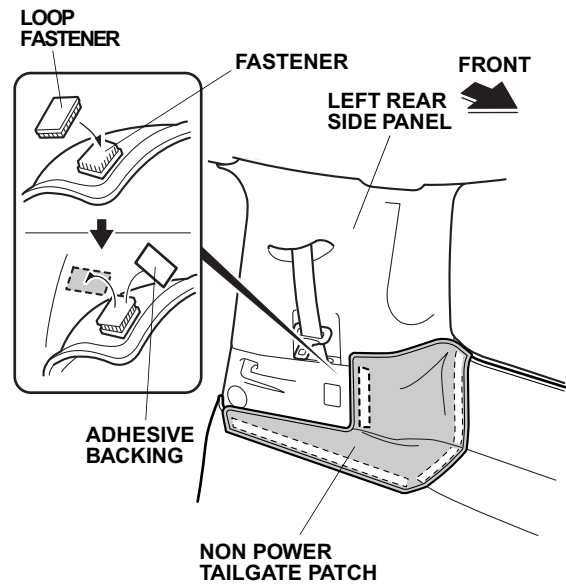
29. Remove the adhesive backing from one loop fastener, fold the non power tailgate patch over, and attach the one loop fastener pad to the left rear side panel. Press the one fastener pad firmly against the side panel with the rubber roller.

30. Hook two loops on the cargo liner to two anchors.

CARGO LINER

2 ANCHORS

2 LOOPS

AII 39301 (0805)